


babyrest

TOMMI BEDSIDE

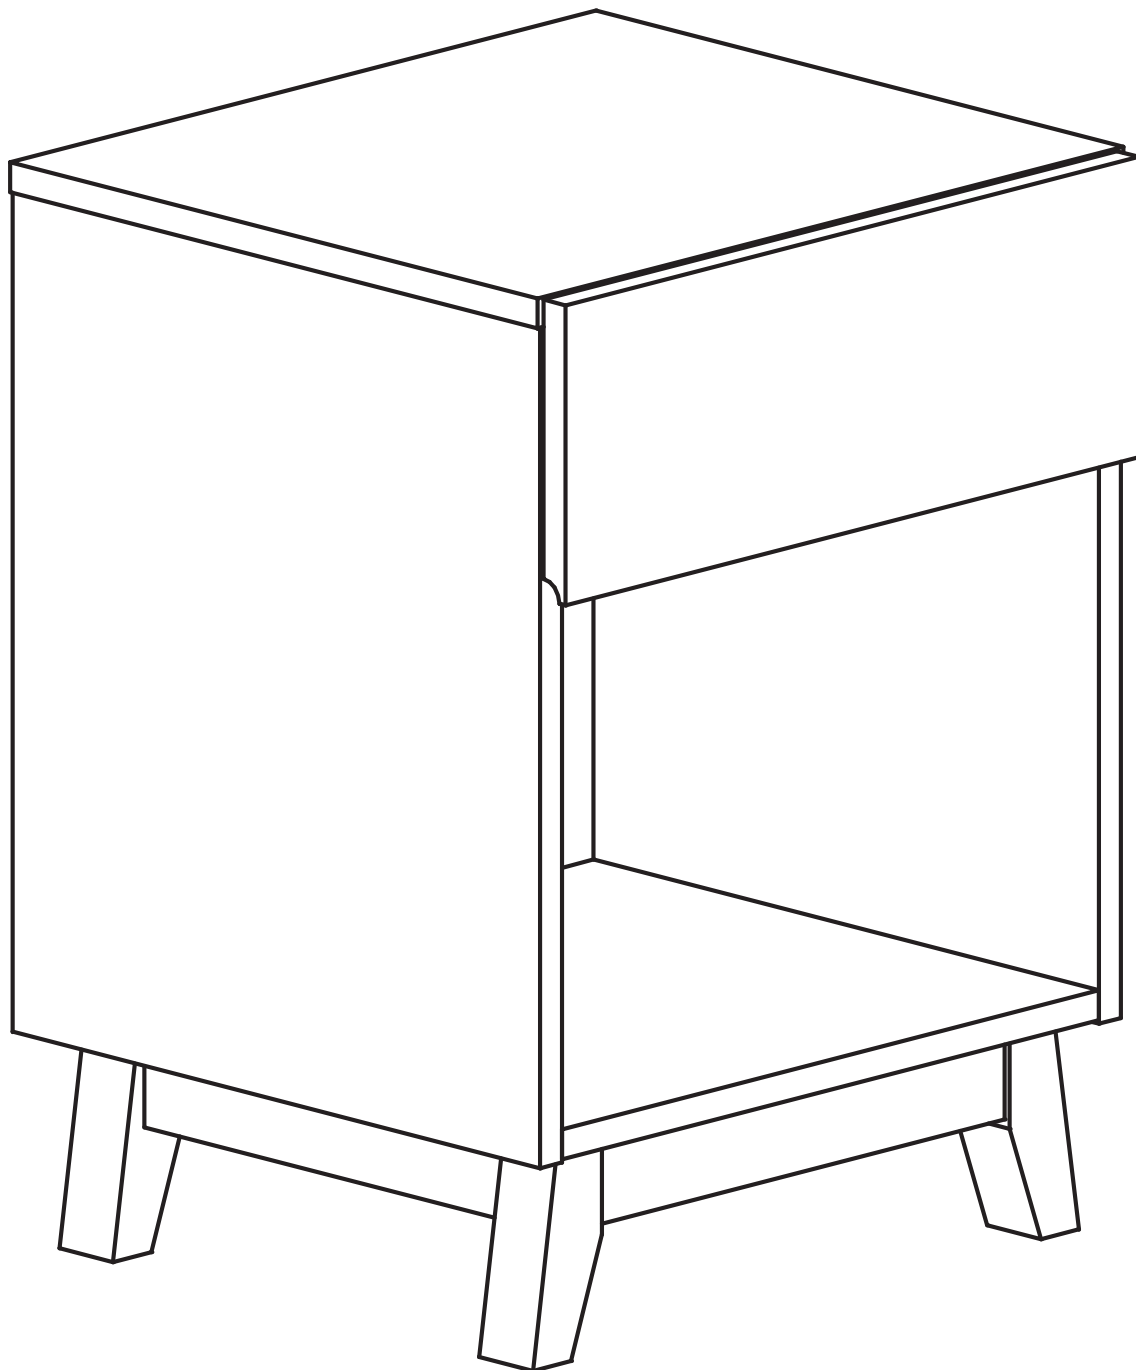













1 DRAWER

Assembly Instructions





- The manufacturer's assembly instructions must be followed in detail.
- To clean the surface, use a damp cloth with water. Do not use window cleaners or cleaning abrasives as this may scratch the surface and could damage the protective coating.

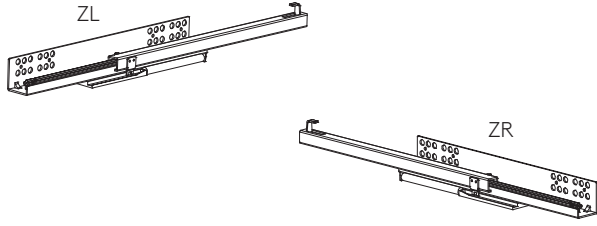HARDWARE INVENTORY


A  $\varnothing 7,8 \times 40$ x10	B  L-34/ST x16	C  $\varnothing 15 \times 16$ x16	D  Maxifix/M6 x4	E  x4	F  $\varnothing 7 \times 50$ x4	G  x2
H  $\varnothing 3,5 \times 16$ x4	J  $\varnothing 3,5 \times 20$ x5	K  $\varnothing 6 \times 11$ x18	L  $\varnothing 3 \times 16$ x2	 ZL ZR FAV-Q/L-400mm x1		
	 SW6 x1	 SW4 x1				

(!) Check hardware against ruler for correct screw. Example Item A is 40mm long.

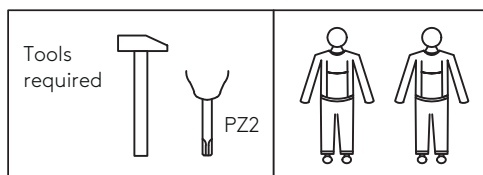


WARNING


Do not leave children unattended near furniture during installation to avoid danger of suffocation.

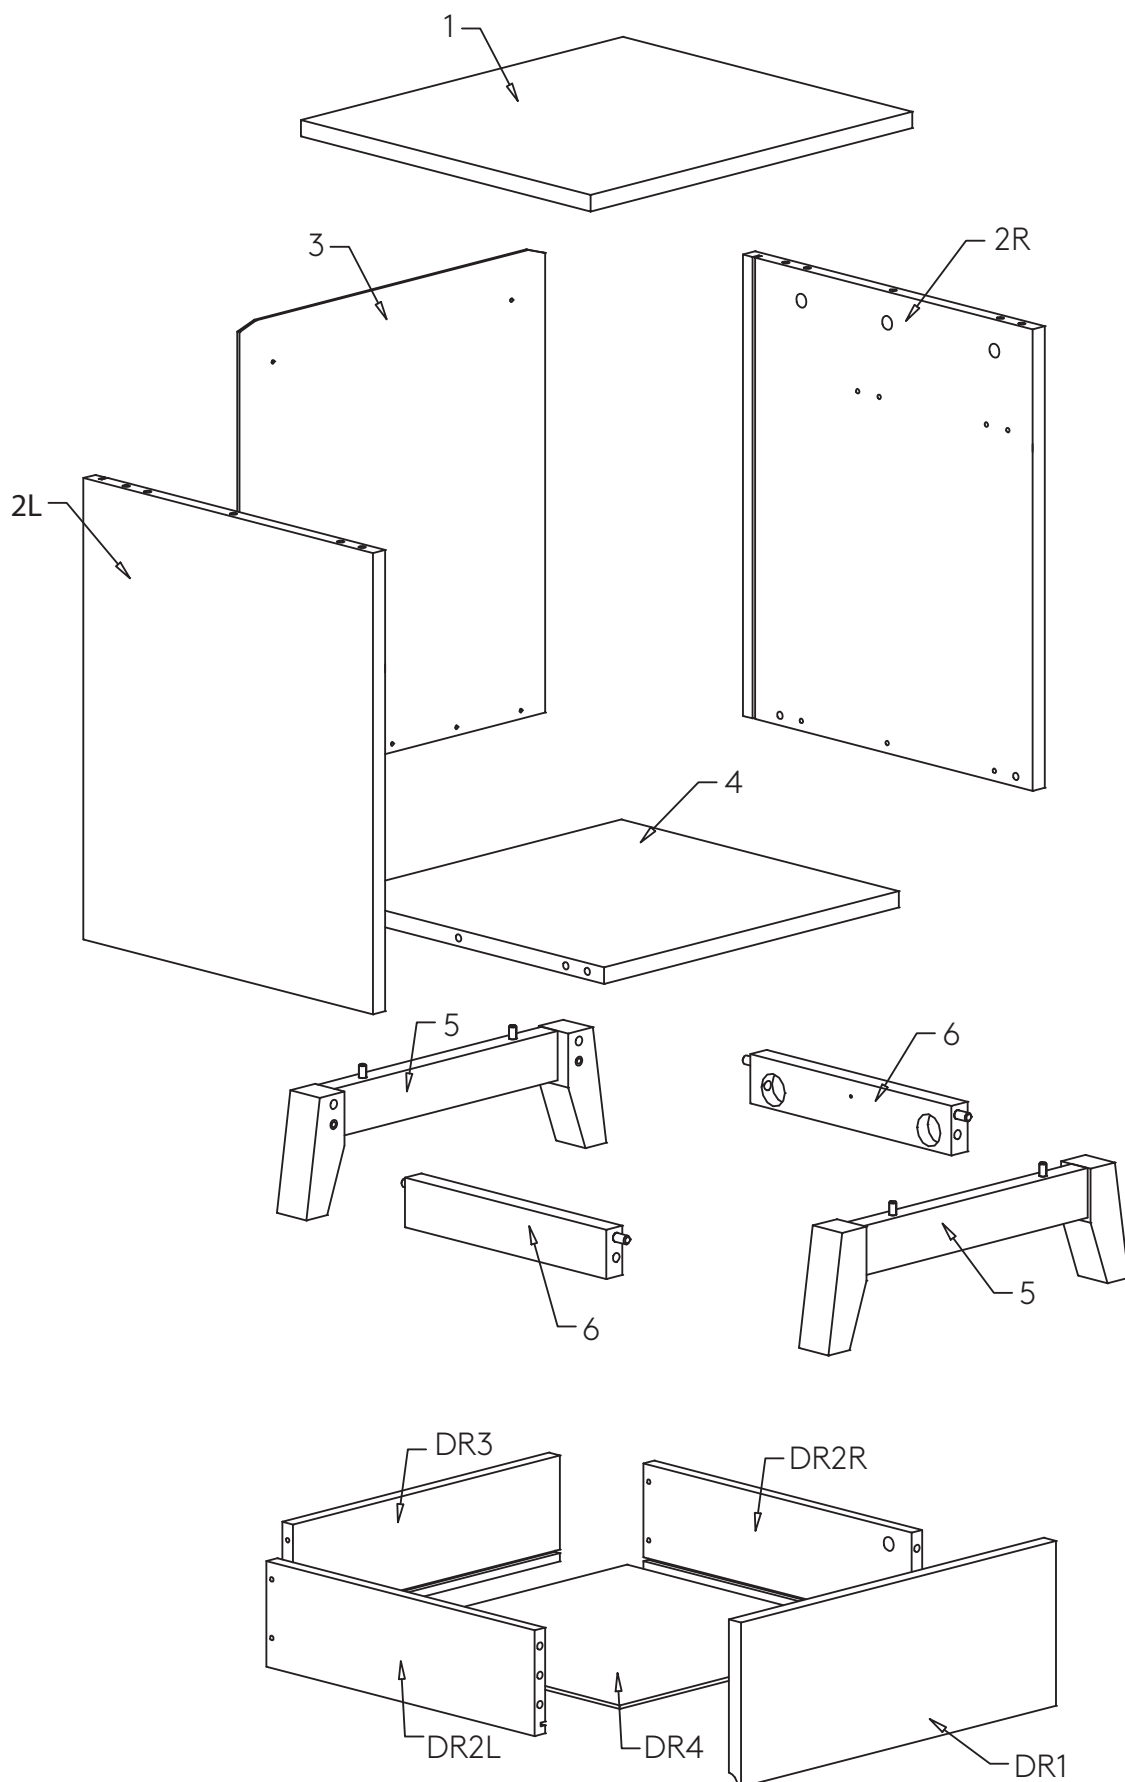


Parcel 1/1:
 No. 1 -x1
 No. 2L -x1
 No. 2R -x1
 No. 3 -x1
 No. 4 -x1
 No. 5 -x2
 No. 6 -x2
 No. DR1 -x1
 No. DR2L -x3
 No. DR2R -x3
 No. DR3 -x1
 No. DR4 -x1
 No. AI -x1
 No. FIT -x1

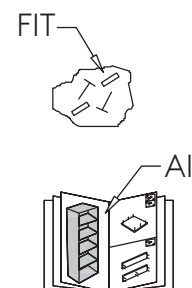


STEP 1

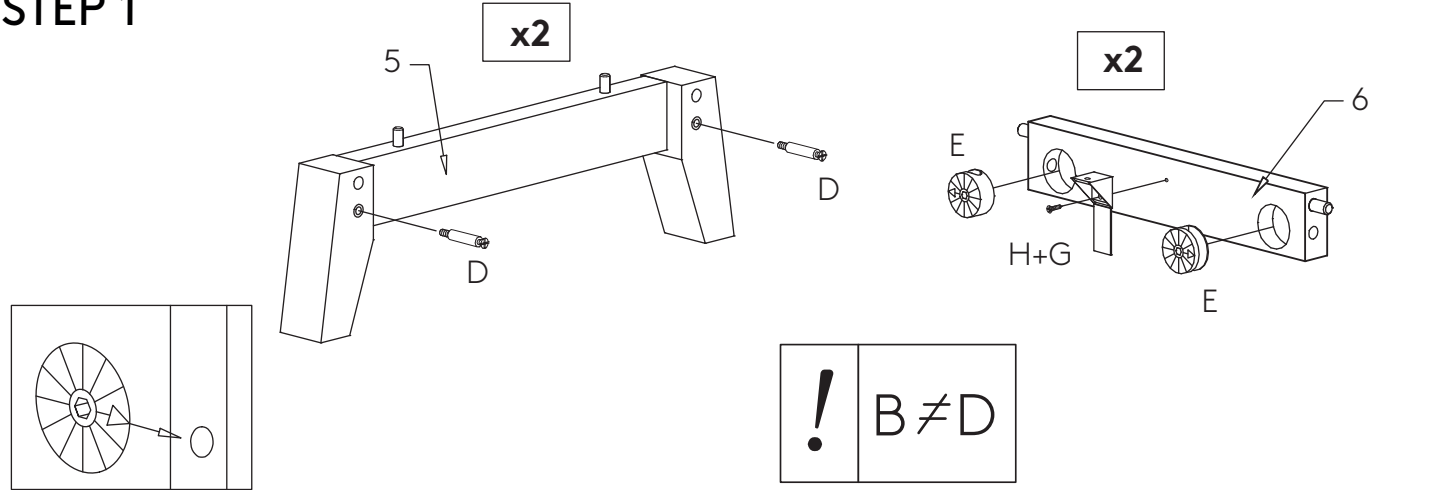



STEP 2

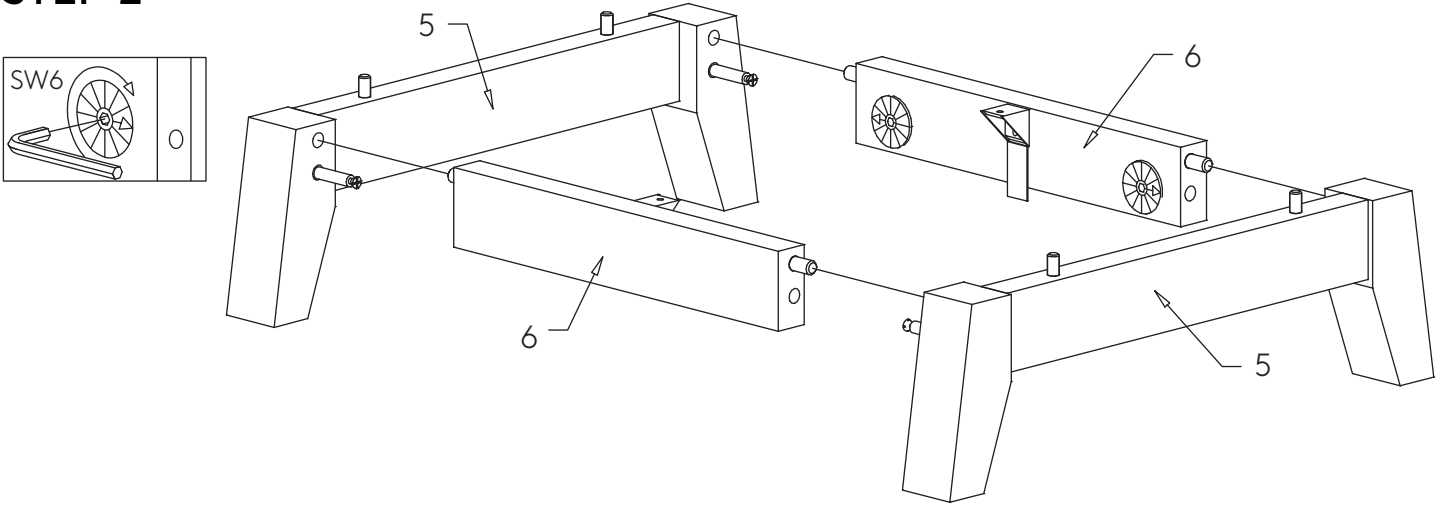


STEP 3

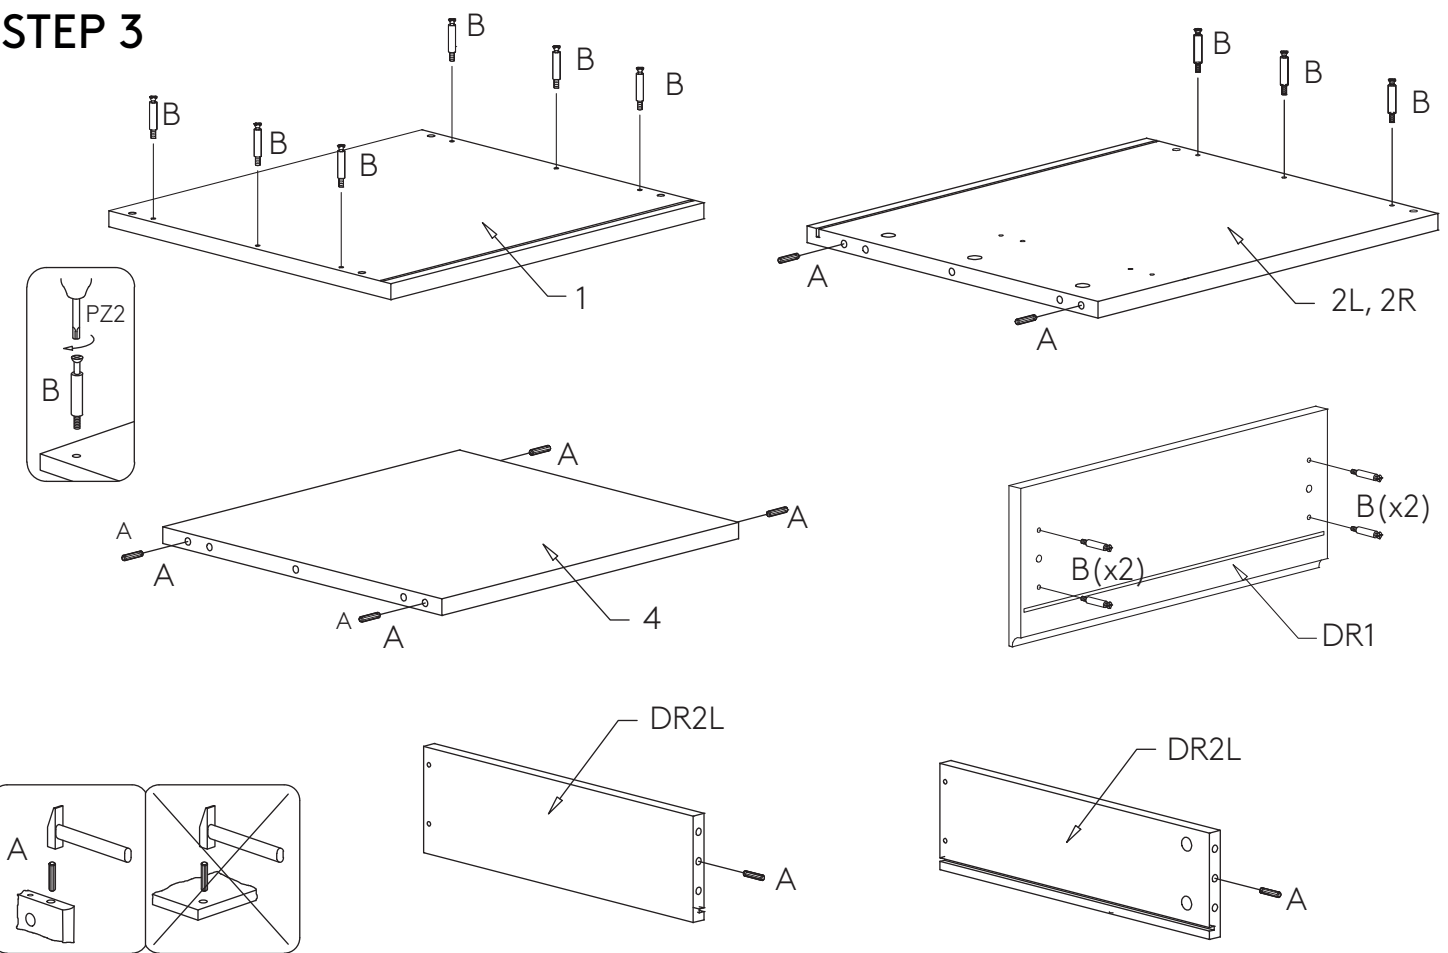


STEP 4

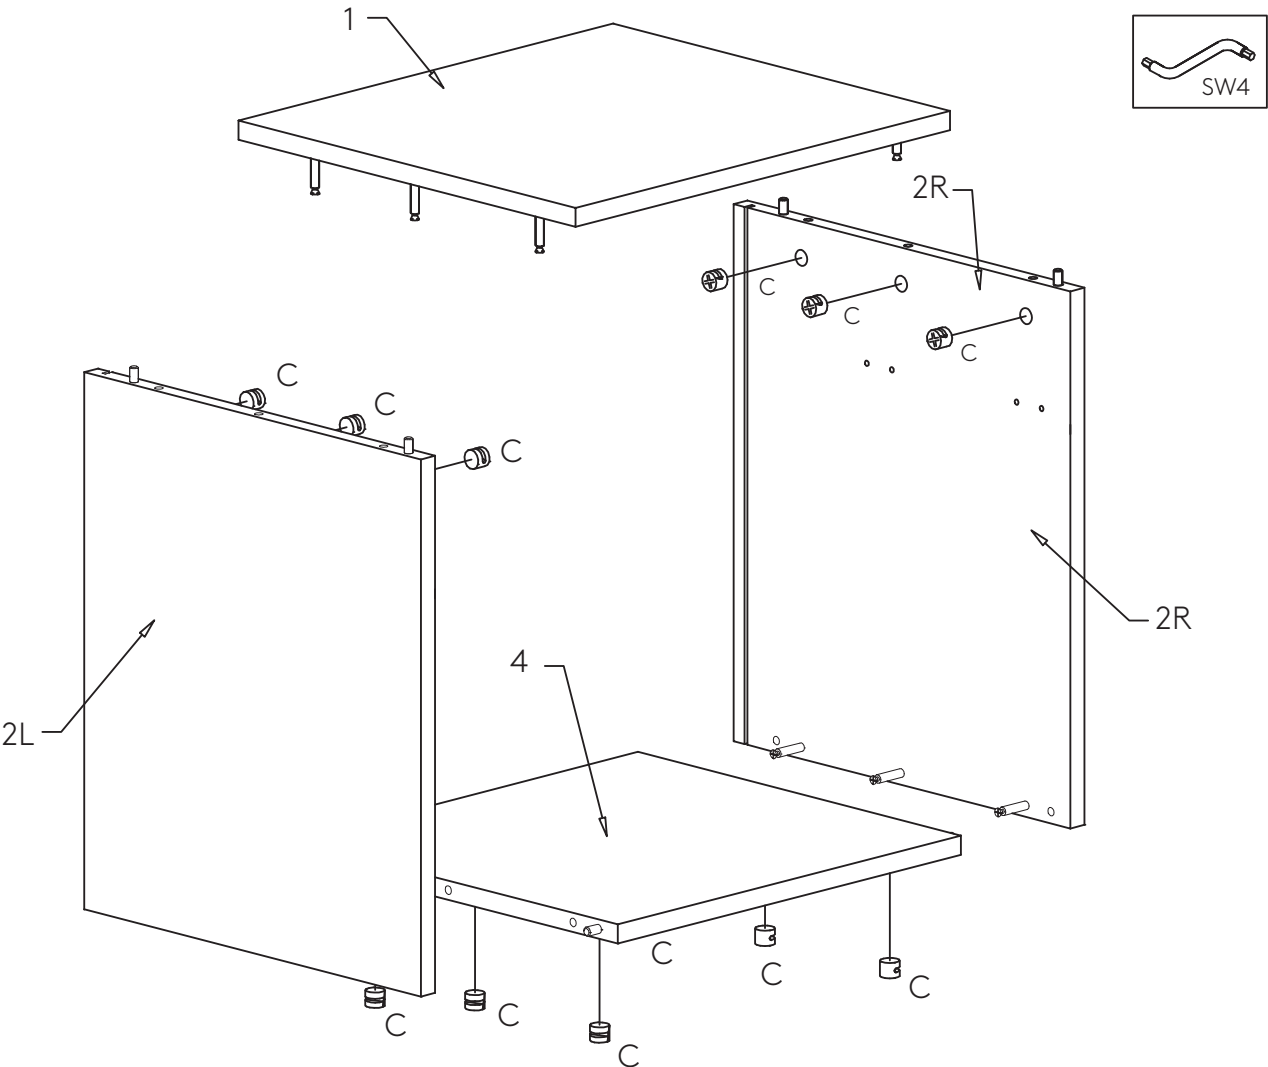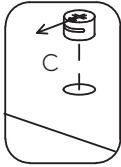


STEP 5

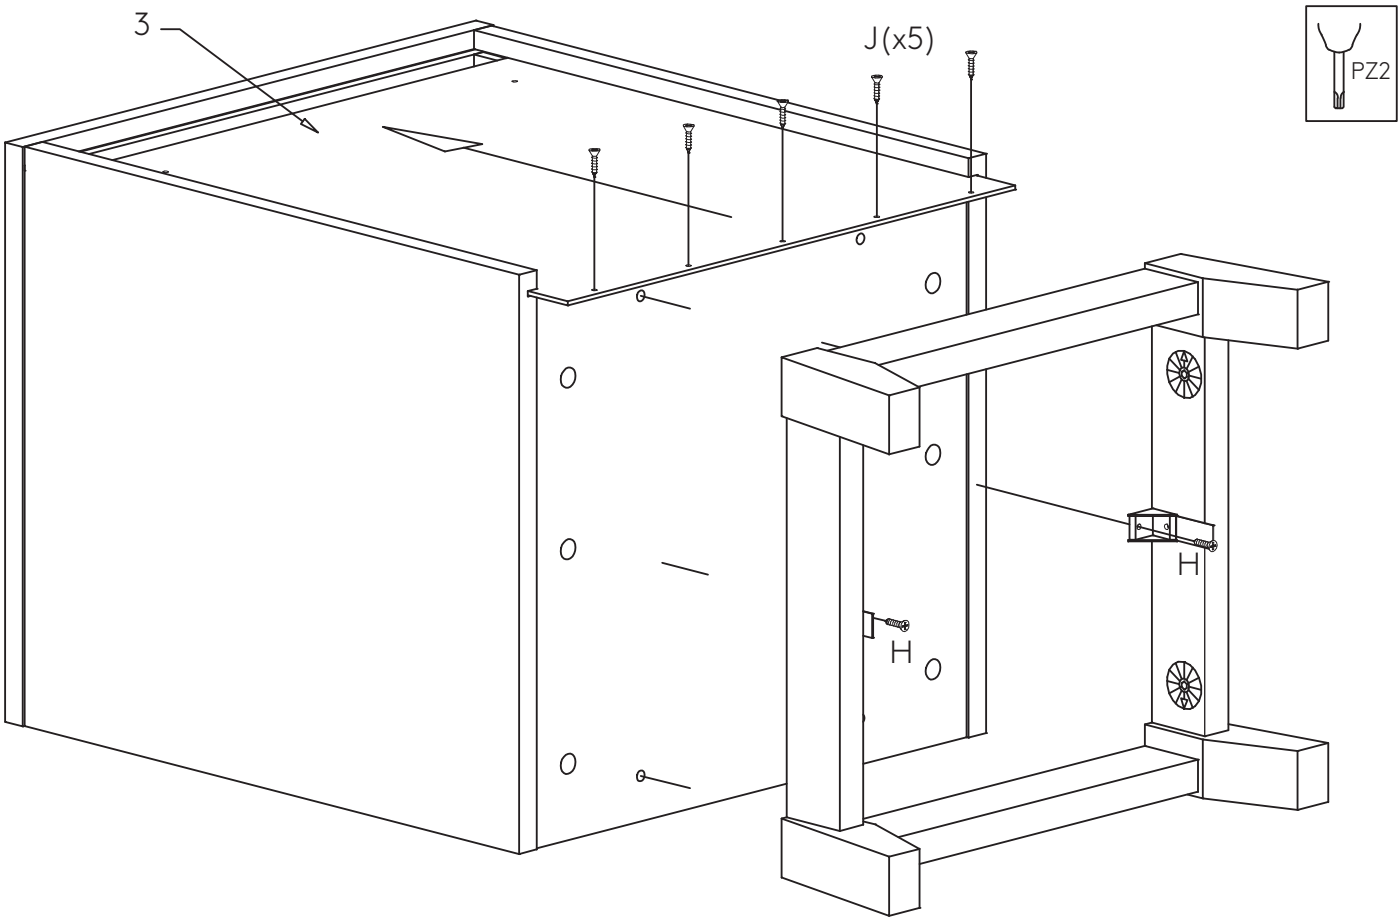

STEP 6

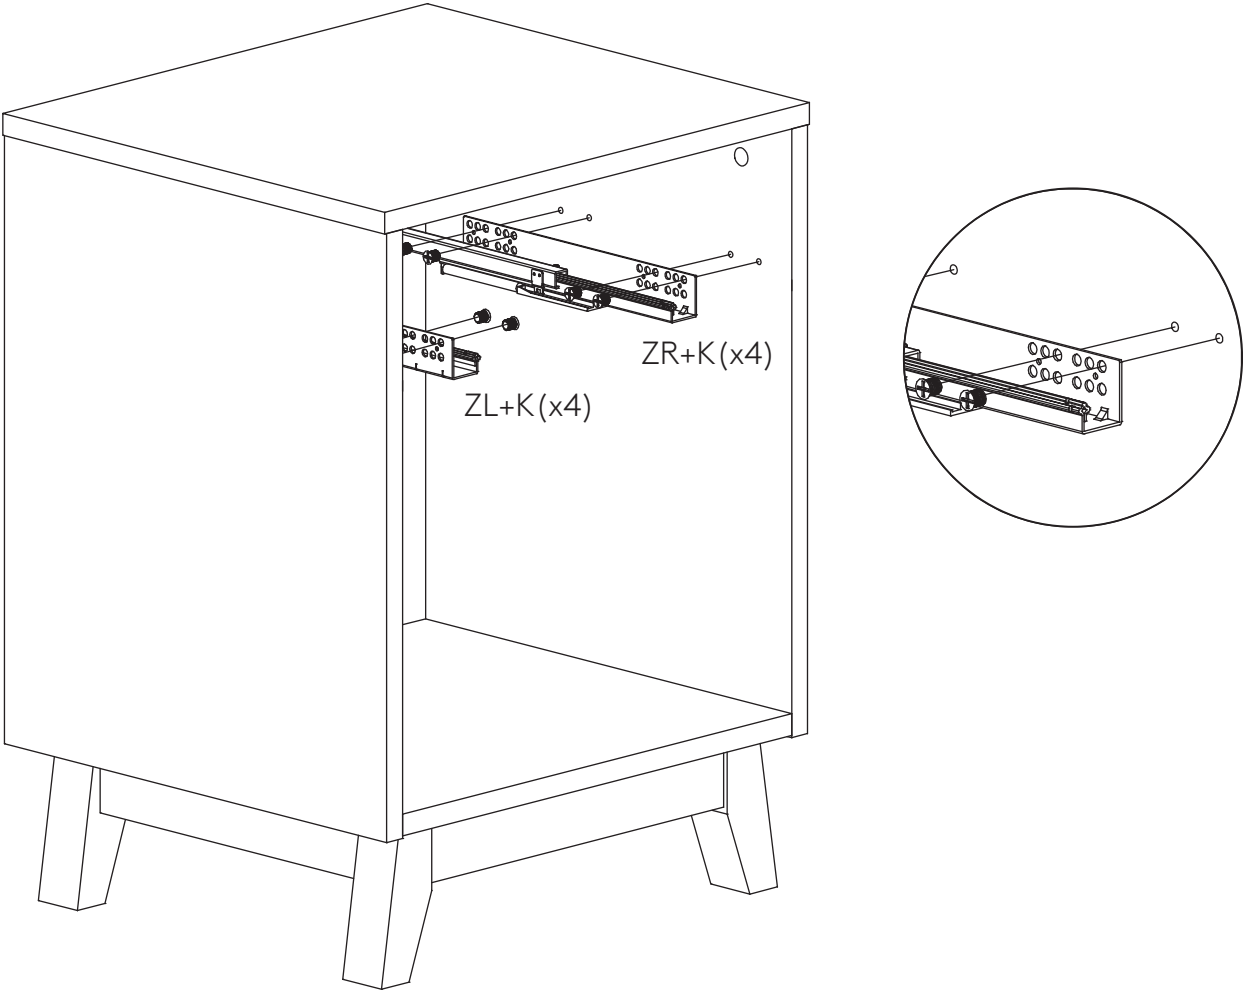

STEP 7

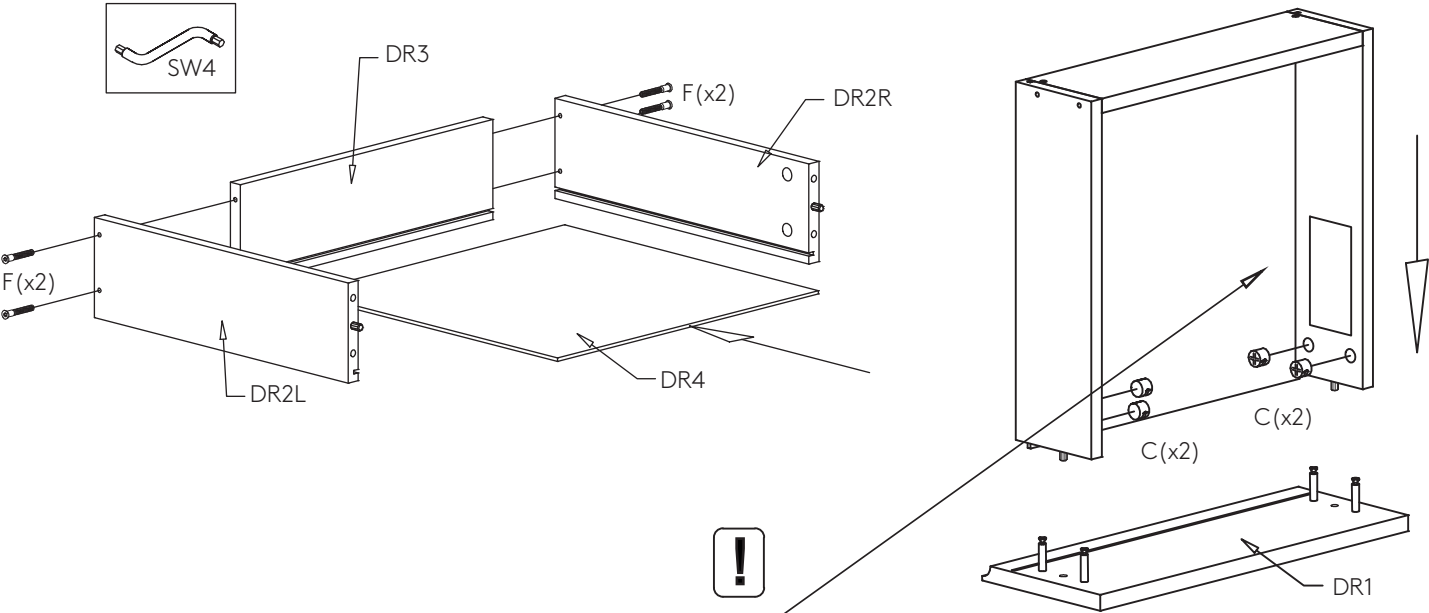


WARNING

This furniture item can become unstable and may topple if climbed upon and can be especially dangerous to children. Serious injury or death may result. It is undesirable to place objects of interest to children in view on this type of furniture item, as children may be tempted to climb to retrieve objects the result being that the furniture item may tip and cause injury or death. This furniture item meets the requirements of AS/NZS 4935. However, even furniture items that meet these requirements can tip under certain circumstances, especially when placed on carpet, uneven or sloping flooring, or when subject to extreme use. Attachment of the furniture item to an appropriate structural component of the building using suitable means as advised by a qualified tradesperson, is strongly recommended even for those furniture items meeting the stability requirements of AS/NZS 4935.

Warning label to be placed inside top drawer

STEP 8

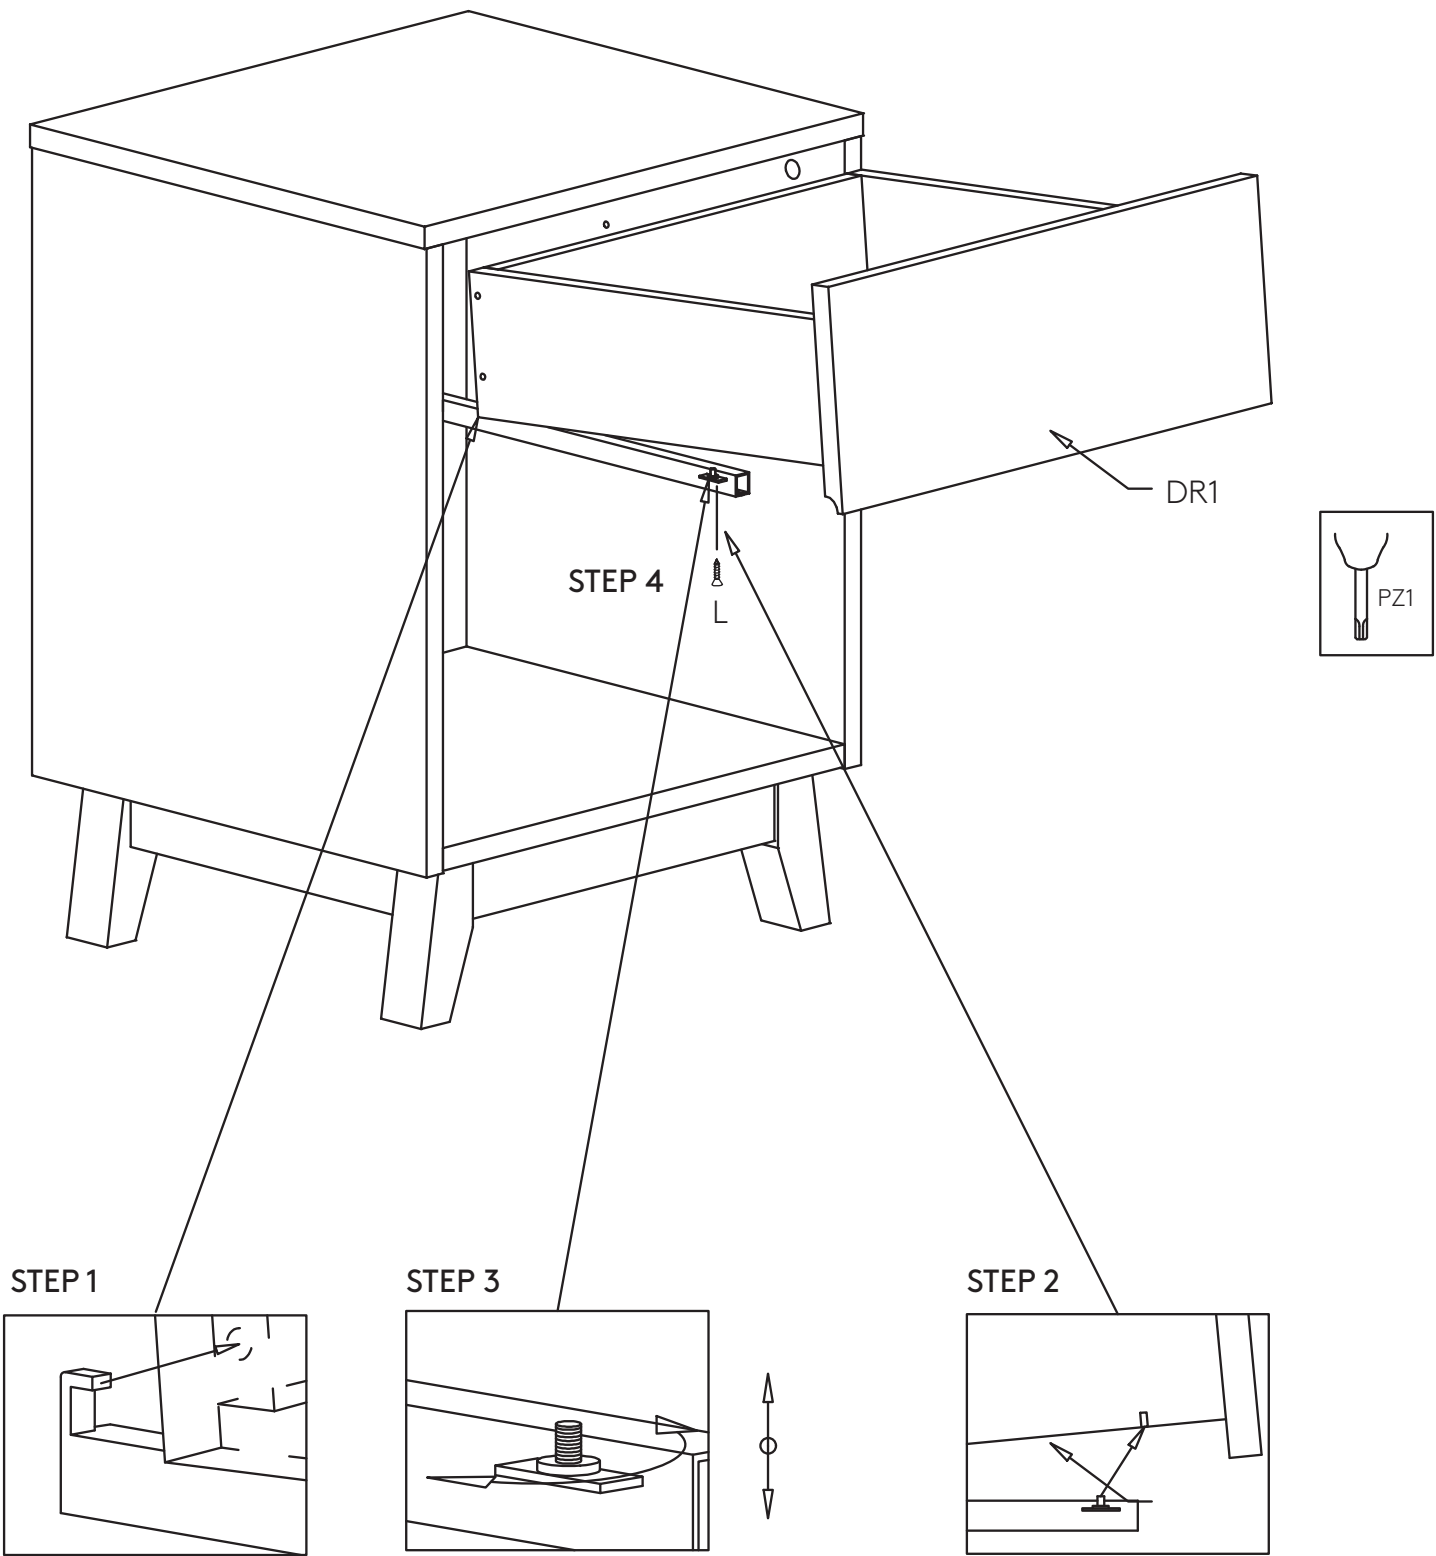


STEP 9 PREVENTION OF TIPPING OVER

Wall mounting is required.


As wall materials vary, screws for fixing to wall are not included.

For advice on suitable screw systems, contact your local specialized dealer.


STEP 1

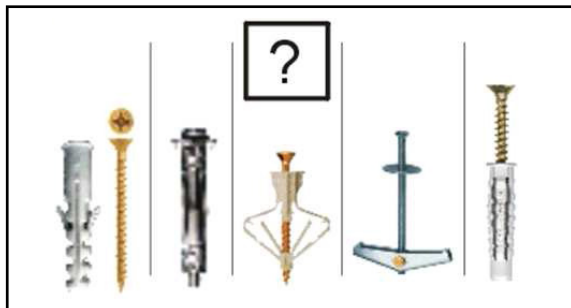




STEP 2

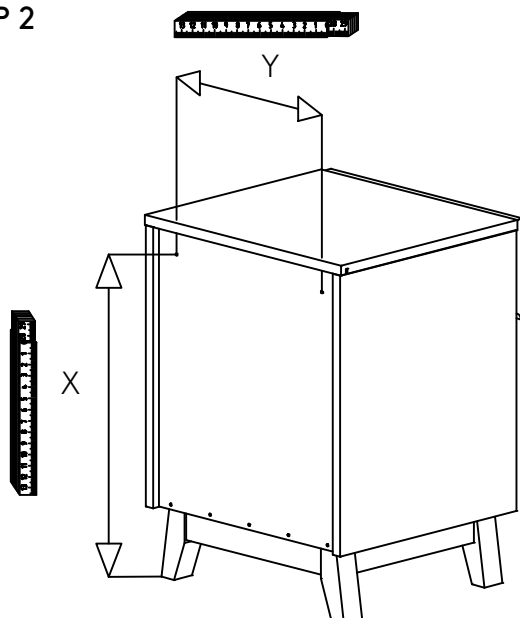

STEP 3

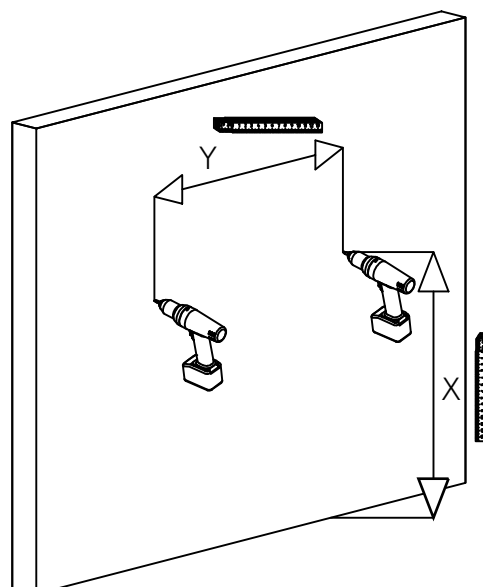

STEP 4

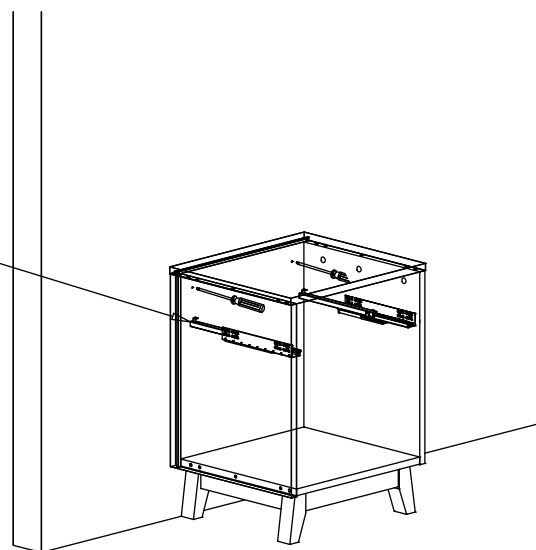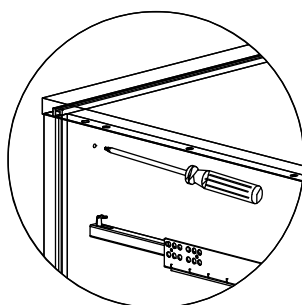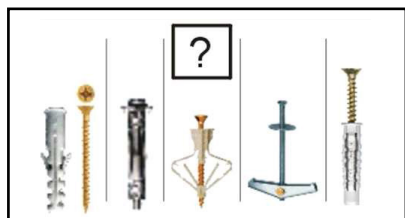

Babyrest
By Anstel Brands Pty Ltd

CONTACT US:

info@babyrest.com.au

+61 3 9131 6545

36 Sunline Drive,
Truganina, VIC, 3029

Country of Manufacture: Poland