babyrest

HAGUE CHEST 3 DRAWERS


MODEL NUMBER: ABF-HCH3


Assembly Instructions



- The manufacturer's assembly instructions must be followed in detail to ensure the safety features of the cot are not compromised.
- To clean the surface, use a damp cloth with water. Do not use window cleaners or cleaning abrasives as this may scratch the surface and could damage the protective coating.


HARDWARE INVENTORY

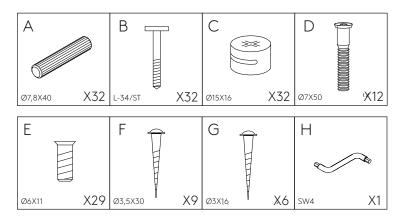

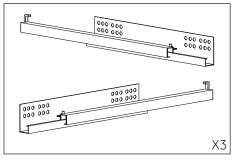


(!) Check hardware against ruler for correct screw. For example, item D is 50 mm long.






WARNING

Do not leave children unattended near furniture during installation to avoid danger of suffocation.

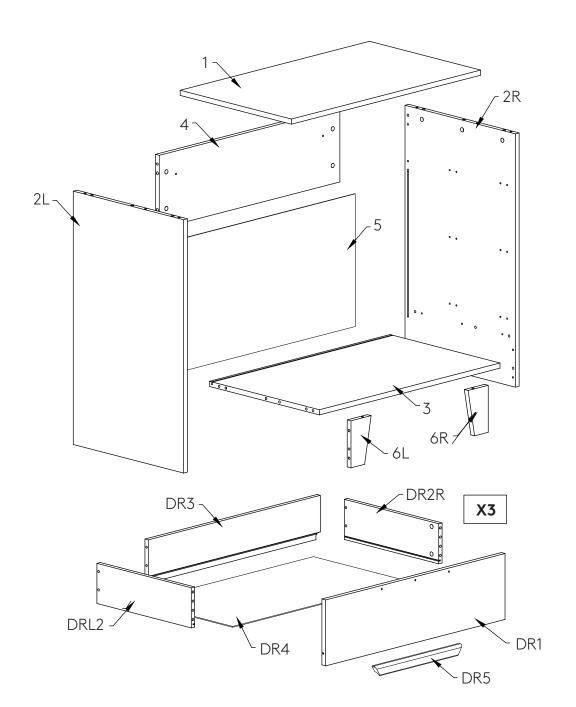


Parcel 1/2: No. 1 - x1 No. 2L - x1 No. 2R - x1 No. 3 - x1 No. 5 - x1 No. DR4 - x3


Parcel 2/2: No.4 -x1 No. GL -x1 No. GR -x1 No. DR1 -x3 No. DR2R -x3 No. DR3 -x3 No. DR5 -x3 No. AI -x1 No. FIT -x1




STEP 1 **B** ₿В B E(x2) В ₿В В В E(x2) C E(x2) E(x2) **₽** C Α E(x2) DR2R PZ2 В Α 2L (+2R/ZR) Α STEP 2 A 6R -С C С @ C C Α C C 6R В C В В A В В В C C p C **a** C C S **a** C - 3

STEP 3

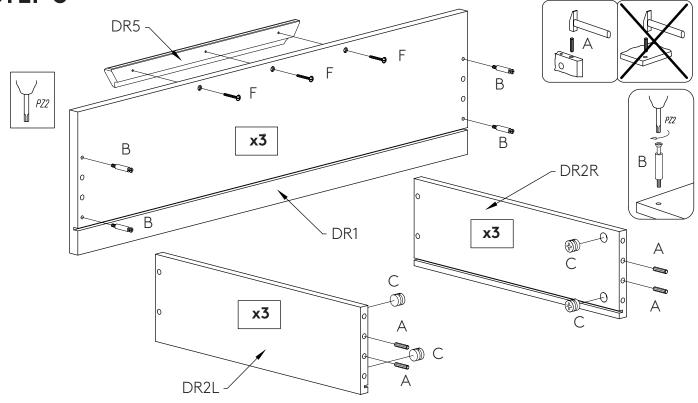


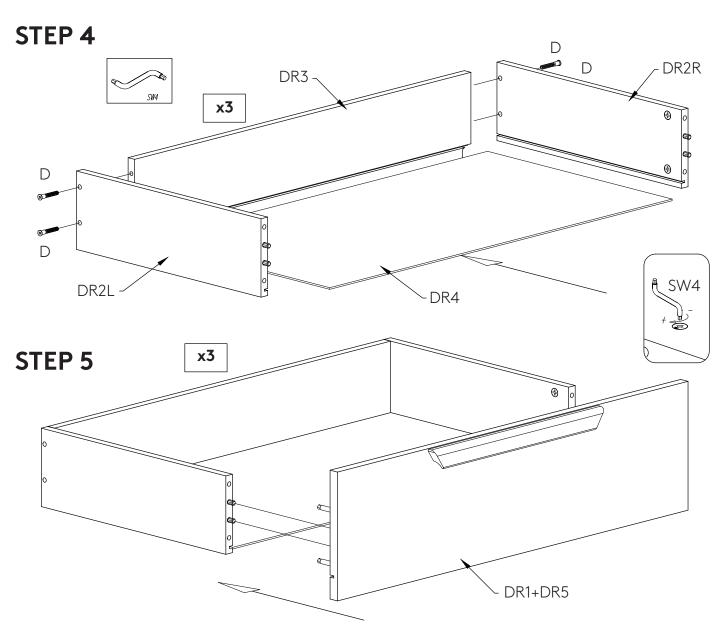


STEP 6

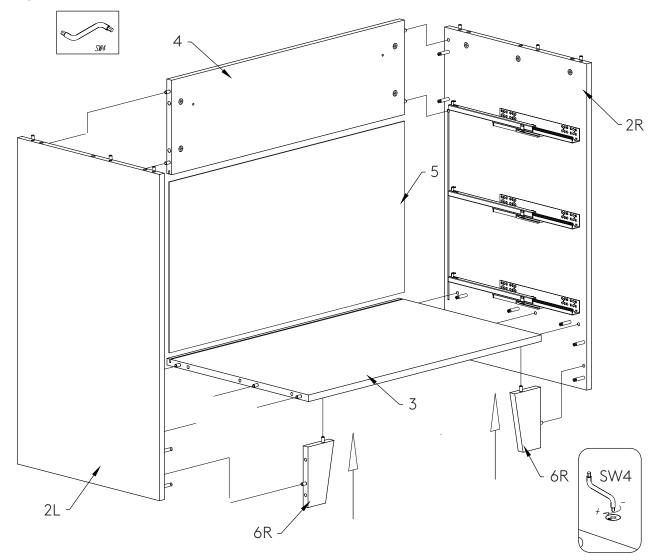

STEP 7

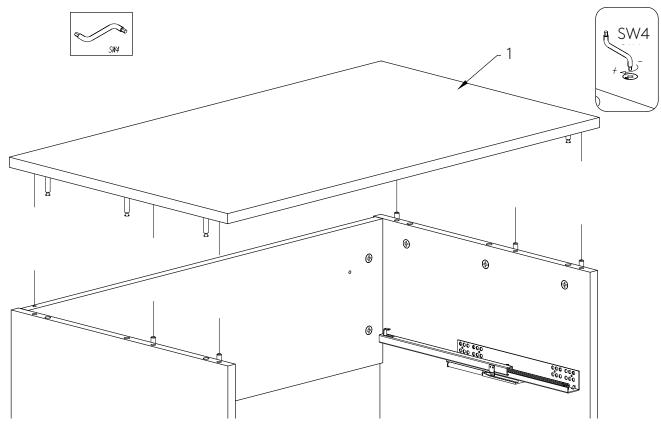

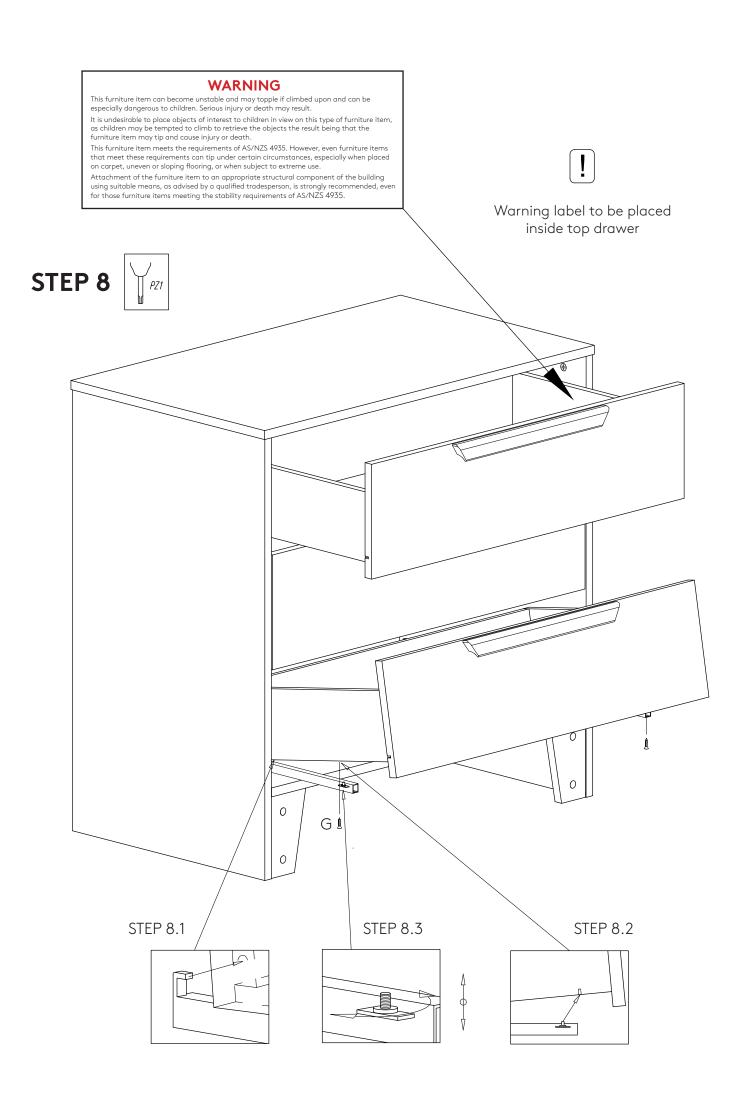



STEP 9


PREVENTION OF TIPPING OVER


Wall mounting is required. As wall materials vary, screws for fixing to wall are not included. For advice on suitable screw systems, contact your local specialised dealer.

STEP 9.1

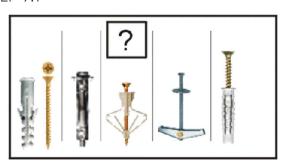

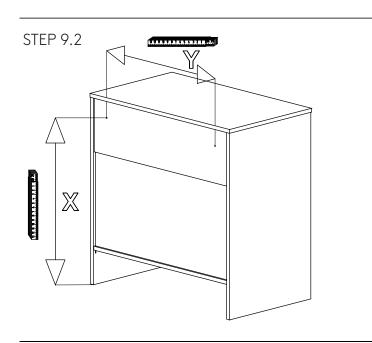

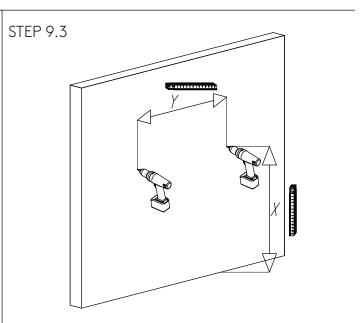

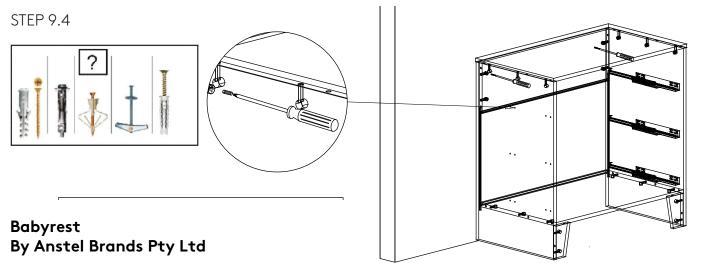

CONTACT US:

info@babyrest.com.au +61 3 9131 6545 36 Sunline Drive, Truganina, VIC, 3029

Made in Poland