


NighSleeper Air

Product code: ABB-NA




INSTRUCTIONS FOR USE


babyrest

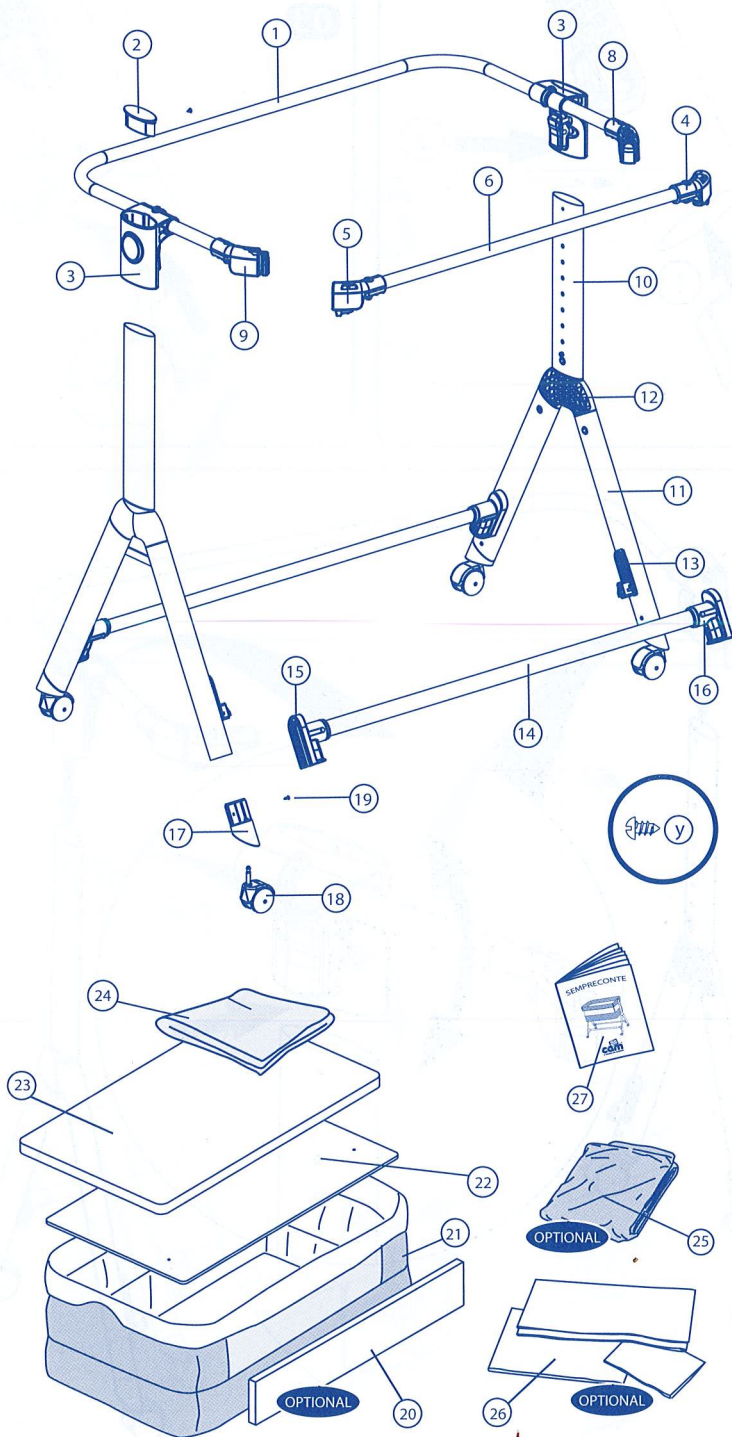


02

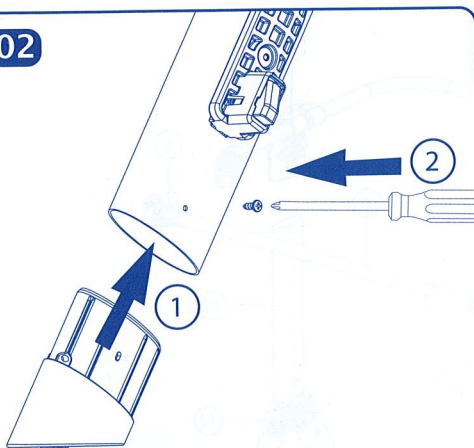


03

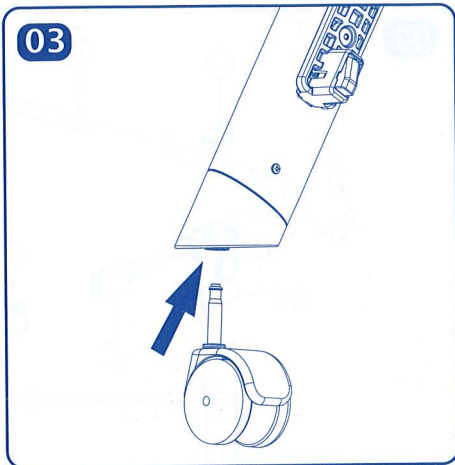


04



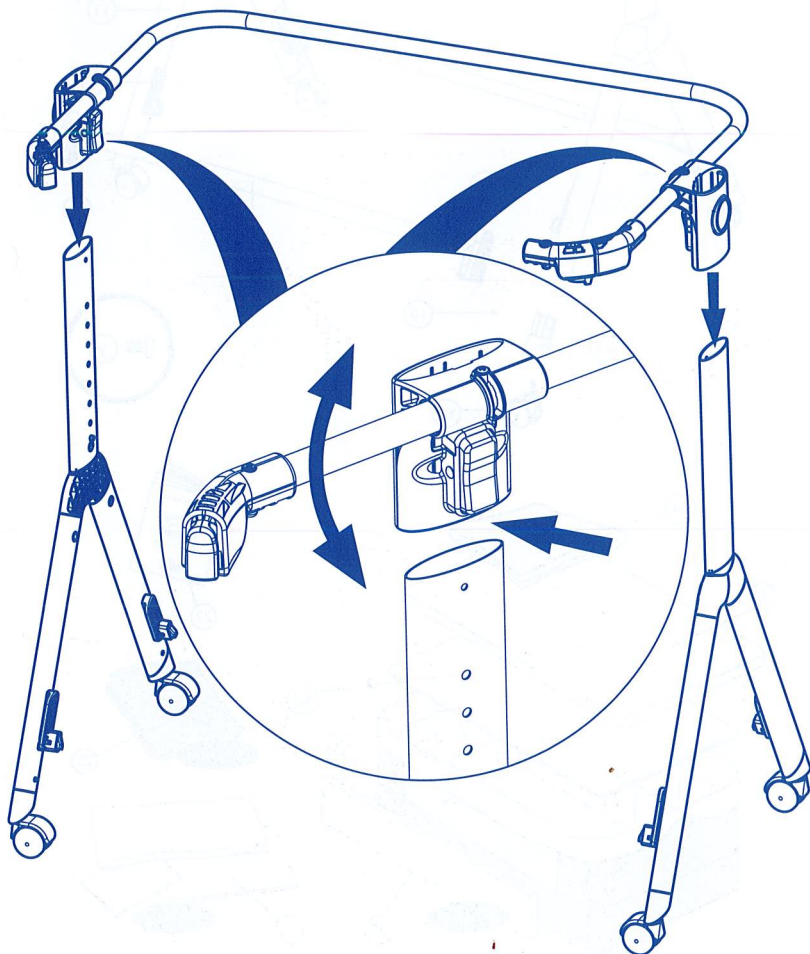


05

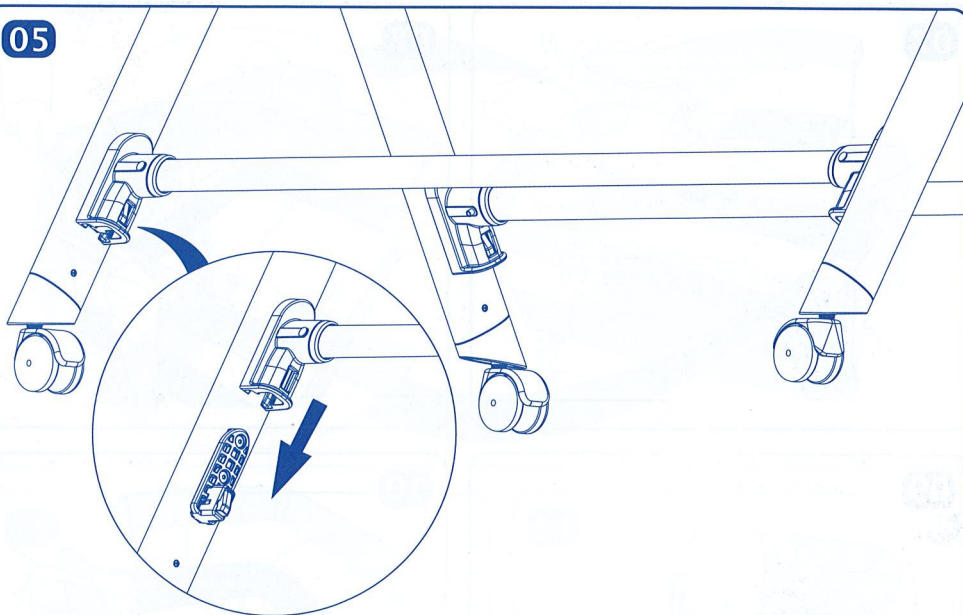


06

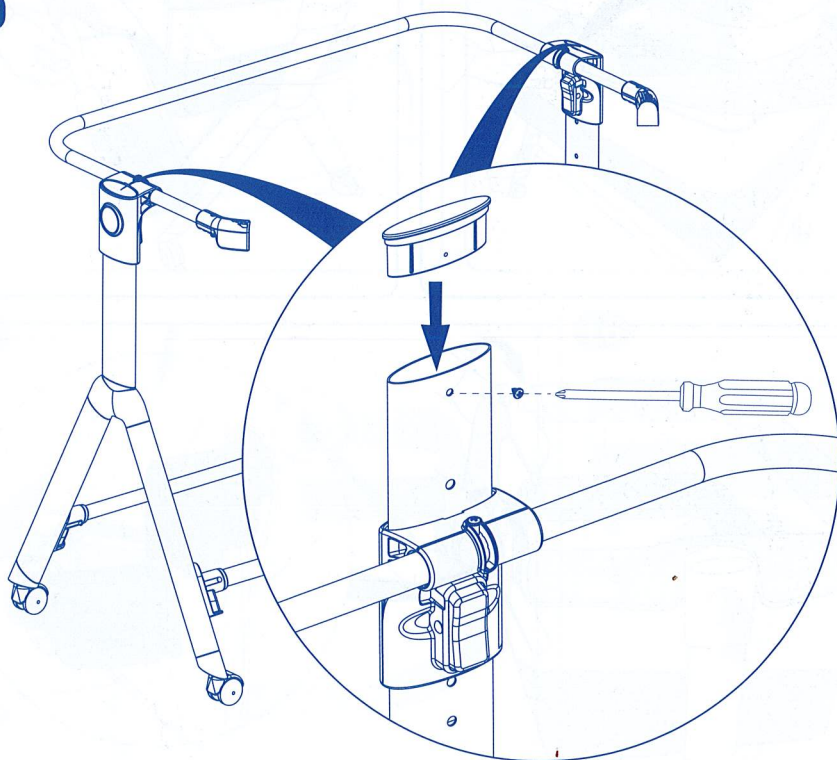


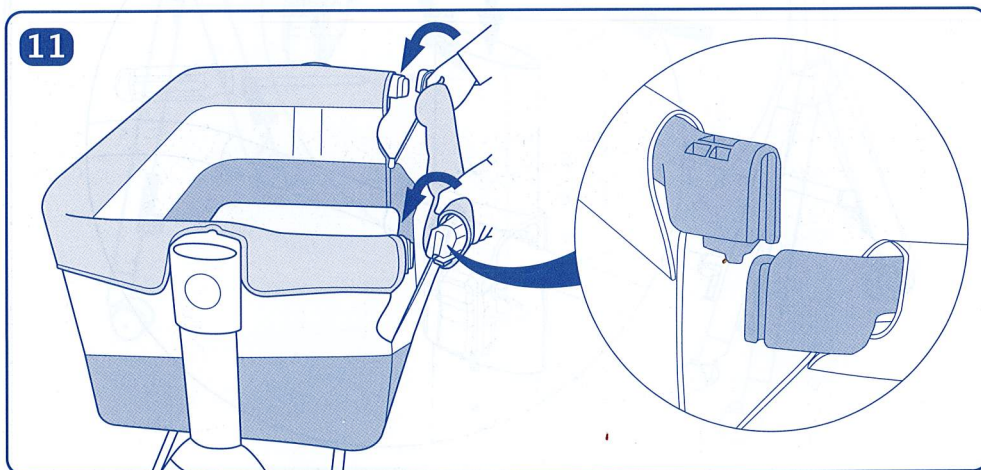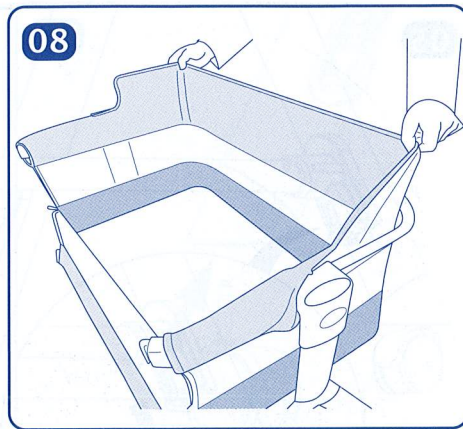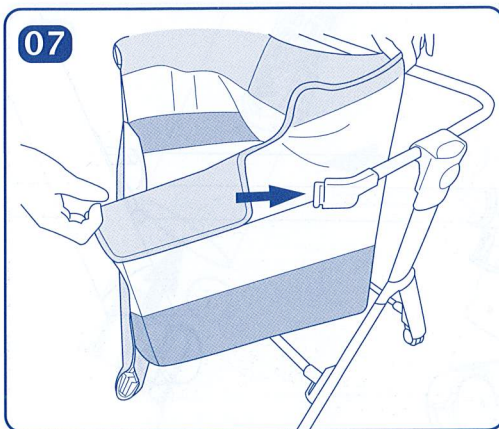


12

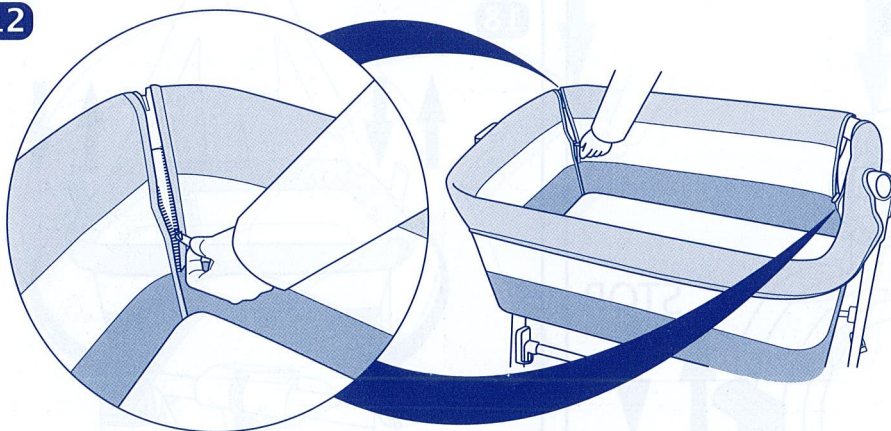


13

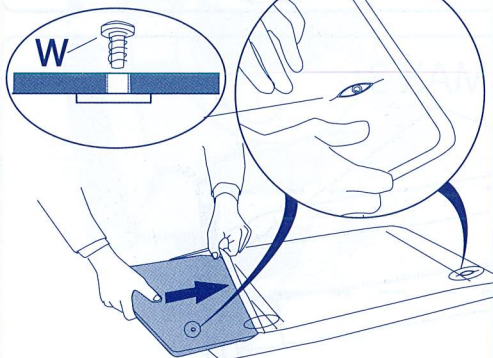


14

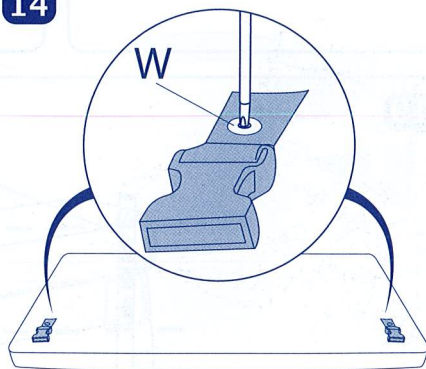


15

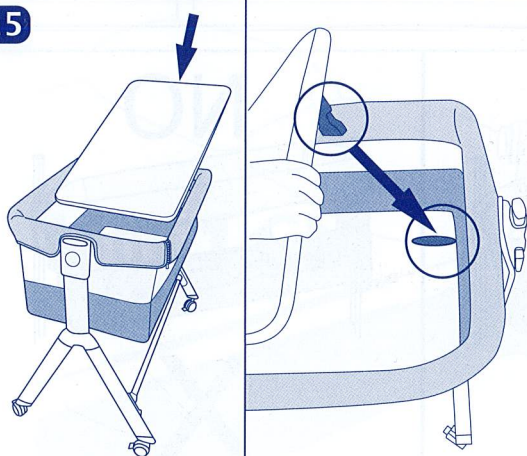


16

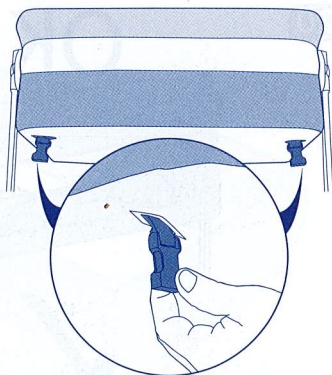

17

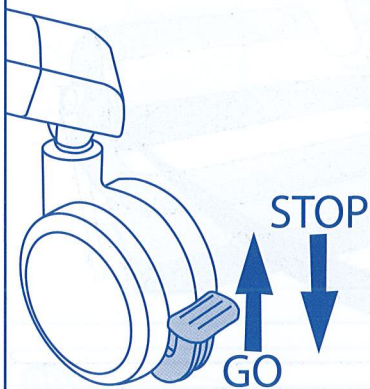


18

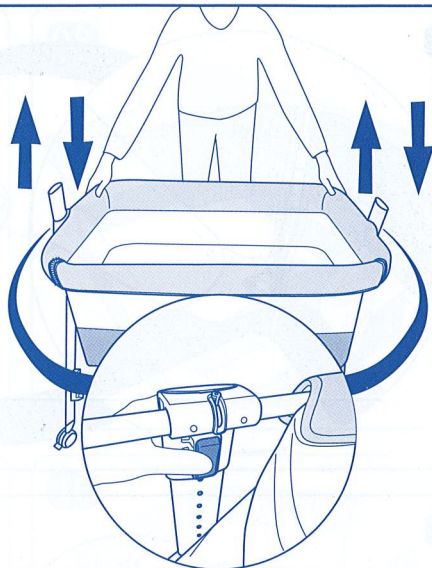


19

MAX 3

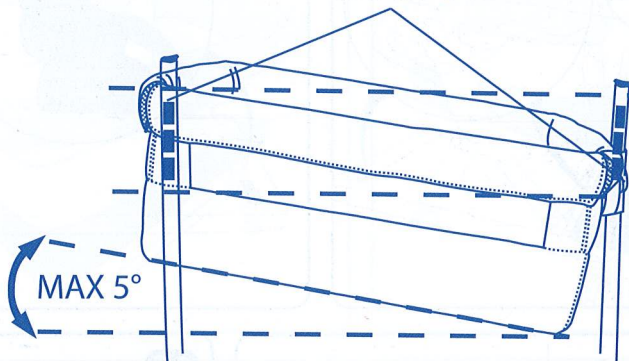


20


OK

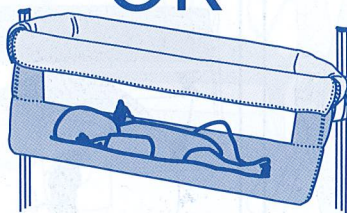

NO

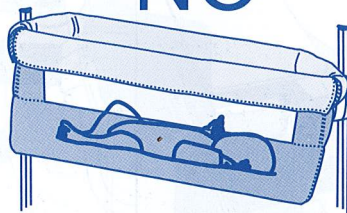


21

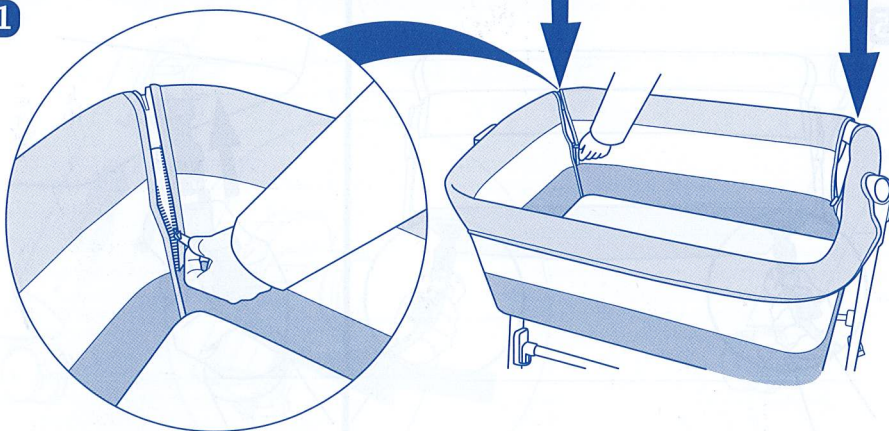


22





23

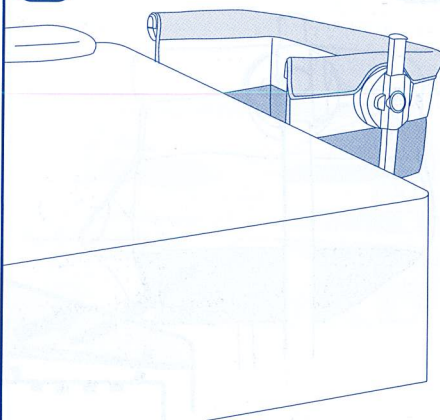


24

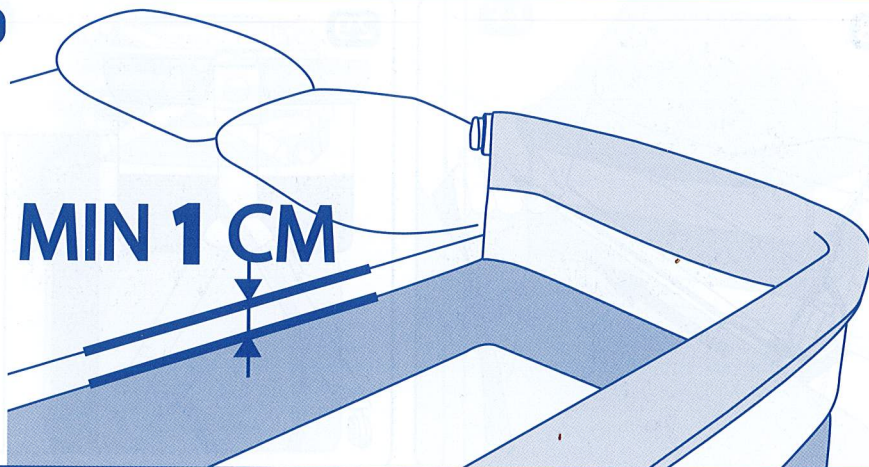


25

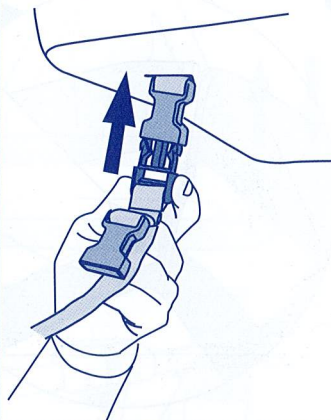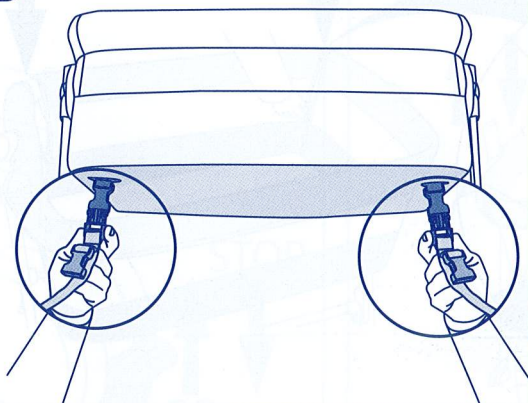


26

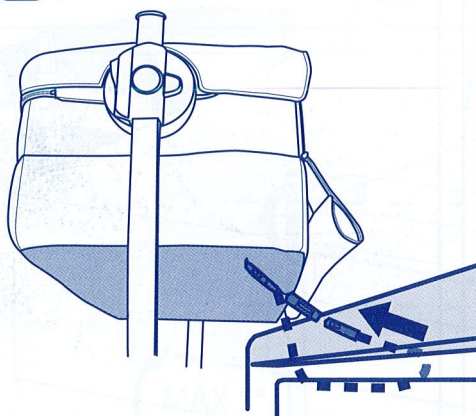


27





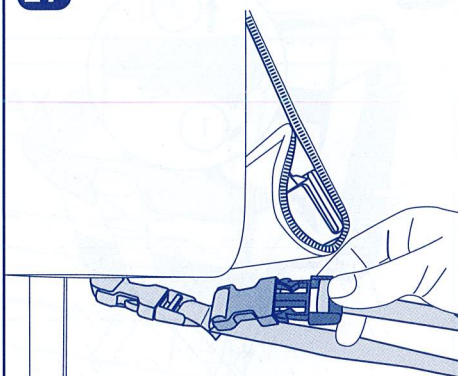


28

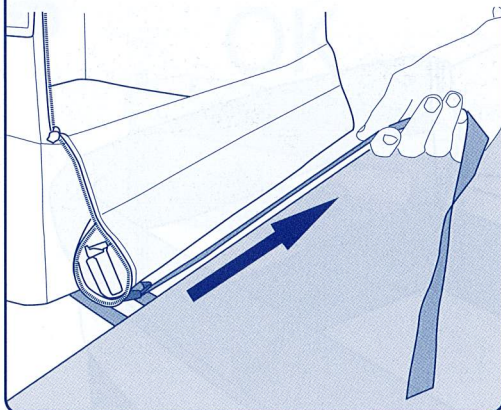

29

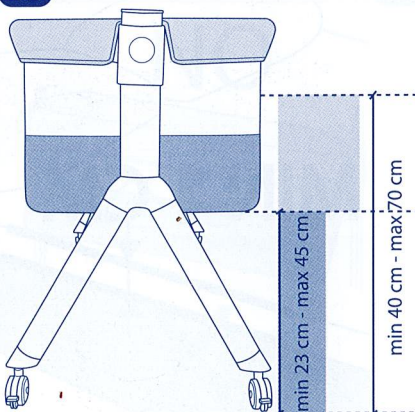

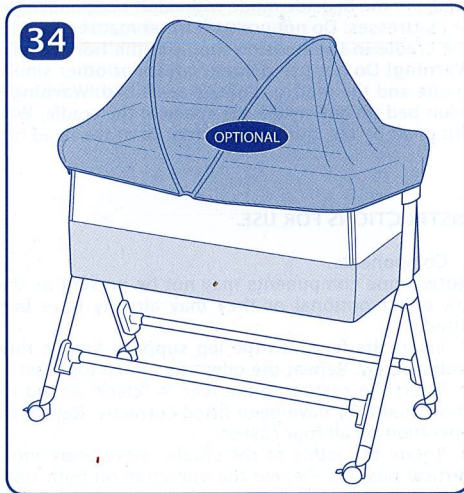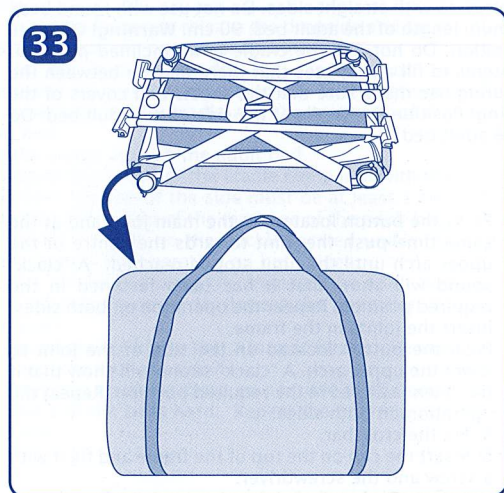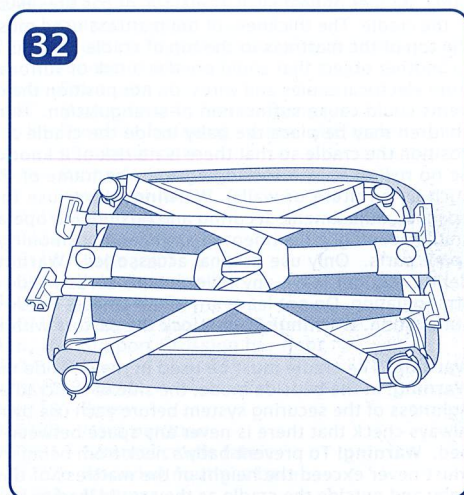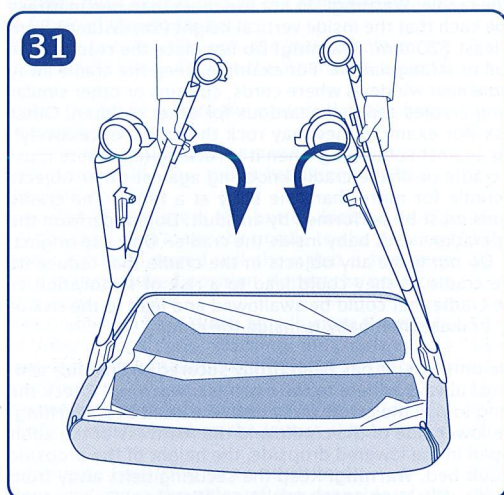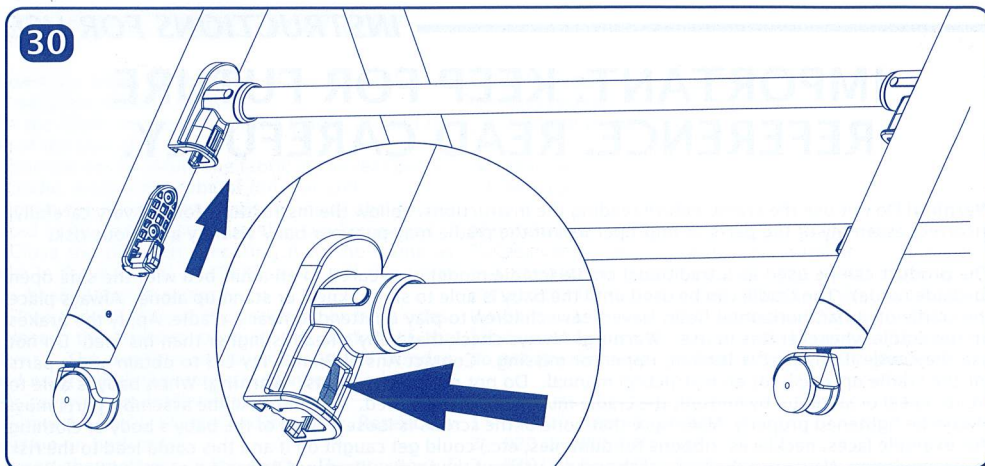

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Warning! Do not use the cradle before reading the instructions. Follow the instructions for use very carefully. Incorrect assembly of the parts or improper use of the cradle may put your baby's safety at serious risk.

The product can be used as a traditional cradle (cradle mode) or secured to an adult bed with the side open (bedside mode). The cradle can be used until the baby is able to sit up, kneel or stand up alone. Always place the cradle on a flat, horizontal floor. Never leave children to play unattended near a cradle. Apply the brakes on the cradle whenever it is in use. **Warning!** Always check that baby's head is higher than his feet. Do not use the cradle if any part is broken, ripped or missing. Contact Anstel Brands Pty Ltd to obtain spare parts for the cradle or to ask for an instruction manual. Do not replace any parts. **Warning!** When baby is able to sit up, kneel or stand up by himself, the cradle must no longer be used. **Warning!** All the assembly parts must always be tightened properly. Make sure that none of the screws is loose as part of the baby's body or clothing (for example laces, necklaces, ribbons for dummies, etc.) could get caught on it and this could lead to the risk of strangulation. Never use the body of the cradle without the frame. **Warning!** Be careful of naked flames and other sources of heat such as electric or gas fires near the cradle. **Warning!** Do not use more than one mattress in the cradle. The thickness of the mattress used must be such that the inside vertical height (the distance from the top of the mattress to the top of cradle sides) is at least 220 mm. **Warning!** Do not place the cradle close to another object that could present a risk of suffocation or strangulation. For example, keep the cradle away from electrical cables and wires; do not position the cradle near windows where cords, curtains or other similar items could cause suffocation or strangulation. Hanging cradles can be hazardous for other children. Other children may place the baby inside the cradle at risk (for example they may rock the cradle excessively). Position the cradle so that there is no risk of it knocking against something when it is rocking (e.g. there must be no risk of baby knocking against the frame of the cradle or of the cradle knocking against other objects such as furniture or walls). **Warning!** Never use the cradle for more than one baby at a time. The cradle opening, adjustment, securing and positioning operations must be performed by an adult. Do not perform the cradle opening, adjustment securing and positioning operations with baby inside the cradle. Only use original spare parts. Only use original accessories. **Warning!** Do not leave any objects in the cradle that reduce its depth. Do not leave any objects with cords inside the cradle as they could lead to a risk of suffocation or strangulation. Do not leave any small objects inside the cradle that could be swallowed and lead to the risk of suffocation. **Warning!** Always lock the castors with the brakes when baby is inside the cradle.

Warning! The cradle must be used in the bedside mode only after it has been firmly secured to an adult bed. **Warning!** In the bedside mode, the side of the cradle must always adhere to the mattress. **Warning!** Check the tightness of the securing system before each use by trying to pull the cradle away from the adult bed. **Warning!** Always check that there is never any space between the lower side of the cradle and the mattress of the adult bed. **Warning!** To prevent baby's neck from being trapped in the lowered drop side, the height of the drop side must never exceed the height of the mattress of the adult bed. **Warning!** Keep the securing belts away from baby and outside the cradle as they could lead to a risk of suffocation or strangulation. **Warning!** Only use the cradle in the bedside mode with adult beds and/or mattresses with straight sides. Do not use with round beds or mattresses. Do not use with water mattresses. Minimum length of the adult bed: 90 cm. **Warning!** Only use the cradle in the bedside mode in the horizontal position. Do not use the cradle in an inclined position. **Warning!** Do not use pillows, covers or other similar items to fill any spaces that there may be between the cradle and the mattress of the adult bed. **Warning!** During use make sure that the sheets and covers of the adult bed do not invade the space of the cradle. **Warning!** Position the cradle at the side of the adult bed. Do not position the cradle at the foot or at the head of the adult bed.

INSTRUCTIONS FOR USE.

1. Components.

Note: some components may not be present as they are either optional or they may already have been fitted.

2. Insert the feet into the leg support. Secure them with a screw. Repeat the operation on all four feet.

3. Insert the castors in the feet. A "clack" sound will show that they have been fitted correctly. Repeat the operation on all four castors.

4. Rotate the joints of the cradle; move them into a vertical position. Repeat the operation on both sides.

Press the button located on the main joint and at the same time push the joint towards the centre of the upper arch until the limit stop is reached. A "clack" sound will show that it has been fastened in the required position. Repeat the operation on both sides. Insert the joints in the frame.

Push the button located on the side of the joint to lower the upper arch. A "clack" sound will show that it has been fastened in the required position. Repeat the operation on both sides.

5. Fix the crossbar.

6. Insert the cap on the top of the frame and fix it with a screw and the screwdriver.

7. Insert the fabric on the front of the cradle. Repeat the operation on both sides.
8. Fit the fabric on the back of the cradle, around the tube of the rear arch.
9. Close the zip to secure the fabric in the rear part of the cradle, around the tube of the rear arch.
10. Insert the tube of the dropside inside the pocket created in the part of the fabric that can be opened.
11. Close the dropside, securing it to the frame as shown in the diagram. A "clack" sound will show that it has been fastened correctly.
12. Close the zip. Repeat the operation on both sides.
13. Insert the wooden base in the pocket of the mattress. The position of the holes on the wooden board must match that of the buttonhole made in the fabric covering the mattress.
14. Screw the buckles to the wooden base. Repeat the operation on both sides.
15. Insert the mattress in the cradle. The position of the buckles must match that of the buttonhole made in the fabric of the cradle base.
16. Pull the buckles through the buttonhole in the fabric of cradle base. Repeat the operation on both sides.
17. Press the brake to lock the castors. Lift the brake to release the castors.
18. To raise the cradle, pull it upwards on both sides. A "clack" sound will show that it has been fastened in the required position.
- To lower the cradle, press the button located on the side of the joint and lower the cradle to the required position. A "clack" sound will show that it has been fastened in the required position. Repeat the operation on both sides.
19. The cradle can be inclined by adjusting the height to two different positions. Warning: the cradle can be inclined, but with a maximum difference in the angle of 3 positions.
20. Position the baby's head on the highest side. Do not position baby's head on the lowest side.

Bedside mode (securing to an adult bed).

21. Open the zip at the sides of the dropside of the cradle.
22. Press the button to release the dropside and lift to release. Repeat the operation on both sides.
23. In the bedside mode, the cradle must be positioned so that there is never any space between the lower side of the cradle and the mattress of the adult bed.
- Line the cradle up with the adult bed.
24. Adjust the height of the cradle compared with the adult bed. The top of the side must be at least 1 cm. lower than the height of the mattress of the adult bed.
25. Fasten the belts to the buckle located under the cradle. Repeat the operation on both sides.
26. Pass the belts around the frame of the adult bed from the bottom upwards. Repeat the operation on both sides.
27. Fasten the buckle so that a loop is formed. Repeat the operation on both sides.
28. Move the cradle as close as possible to the adult bed and pull the belts hard. Repeat the operation on both sides.

Fold the cradle

30. Disassembly the crossing bar.
31. Fold the frame.

Accessories

34. Mosquito.

Maintenance

To clean the cradle use warm water and soap. Do not use solvents or derivatives. Dry the metal parts to prevent the formation of rust. Wash the cover by hand in warm water (max. 30° C) using low-duty detergents for delicate fabrics. Do not bleach. Do not use driers, do not dry clean, do not iron. Dry flat in the shade.

Spare parts

- 1 - 920/1 - Rear ring tube
- 2 - 920/2 - Blind stopper
- 3 - 920/3 - Complete joint
- 4 - 920/4 - Dropside fastening system with female connector left
- 5 - 920/5 - Dropside fastening system with female connector left
- 6 - 920/6 - Front tube
- 7 - 920/7 - Main tube with feet couplings
- 8 - 920/8 - Dropside fastening system with male connector right
- 9 - 920/9 - Dropside fastening system with male connector left
- 10 - 920/10 - Main tube
- 11 - 920/11 - Lower Leg
- 12 - 920/12 - Leg's joint
- 13 - 920/13 - Joint crossing bar
- 14 - 920/14 - Crossing bar
- 15 - 920/15 - Support Crossing bar left
- 16 - 920/16 - Support Crossing bar right
- 17 - 920/17 - Foot
- 18 - 920/18 - Wheel
- 19 - 920/19 - Screw
- 20 - 920/20 - Hard partition
- 21 - 920/21 - External cradle fabric
- 22 - 920/22 - Wooden mattress base
- 23 - 920/23 - Mattress
- 24 - 920/24 - Mattress cover
- 25 - 920/25 - Mosquito net (optional)
- 26 - 920/26 - Bedding set pillowcases and sheets (optional)
- 27 - 920 /27 - Instruction manual